


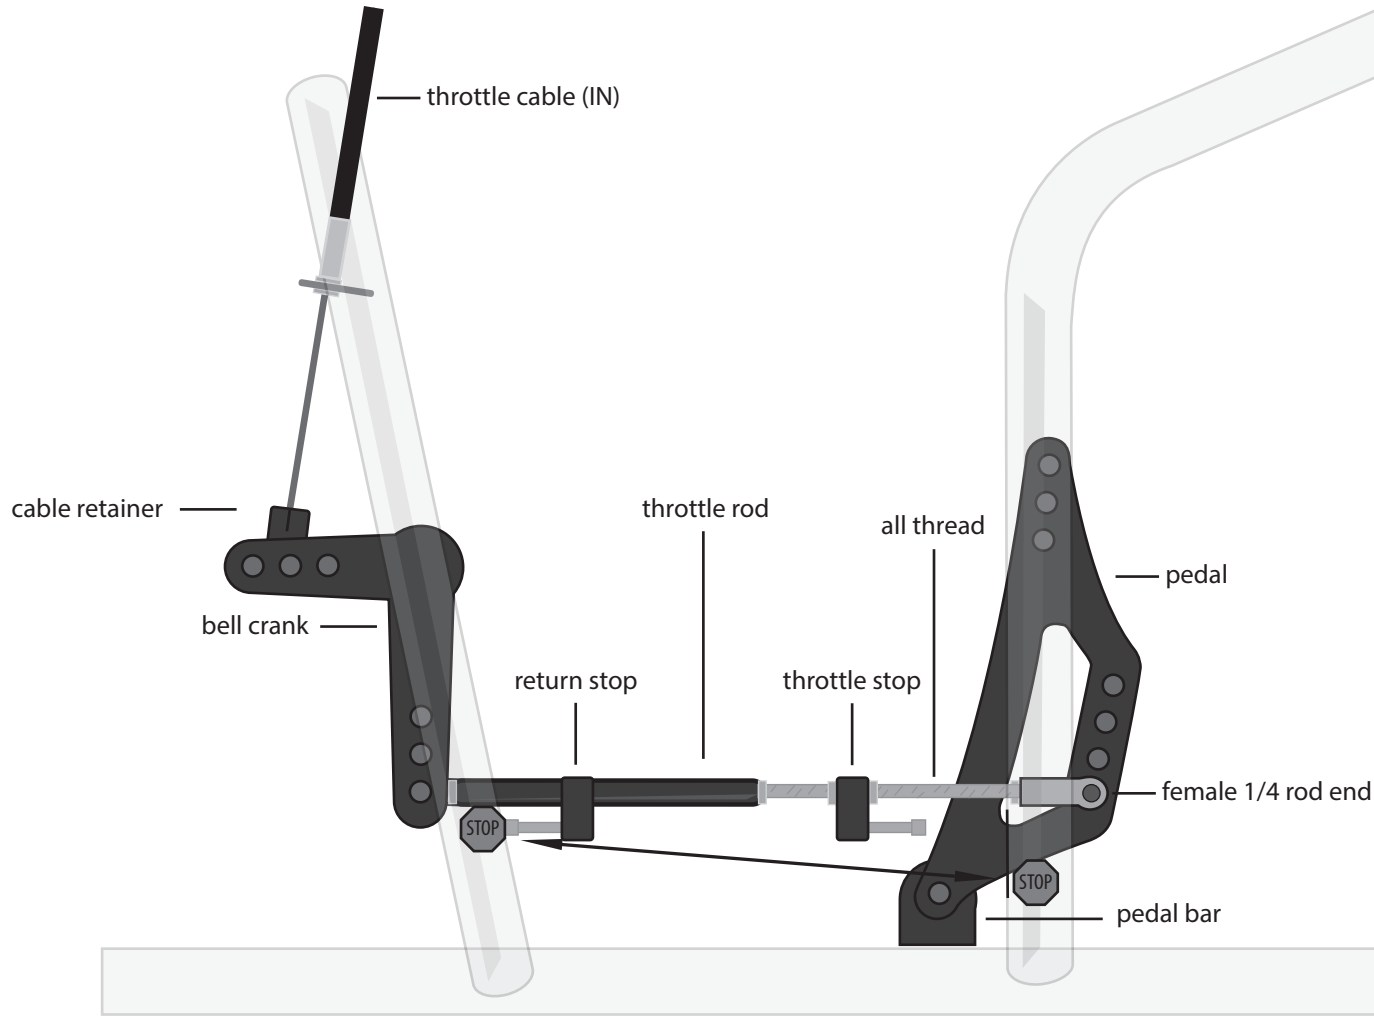

Throttle Pedal Assembly



Setting Pedals

- Pedal Bar and Pedals are adjustable to fit all sizes of driver
 - Pedal Rail in bottom of chassis is designed to bring pedals to the driver or push them further away
- Bell Crank allows for Throttle Cable and Throttle Rod combine for best pitch and throw
- Throttle Rod and All Thread are paired together to achieve desired throttle pitch
 - All thread can be cut to desired length if necessary
- Return Stop and Throttle Stop are also adjustable to achieve maximum comfort
 - Return Stop pinches around Throttle rod and is set in the position to allow pedal to return to drivers comfort zone
 - Throttle Stop threads on to All Thread. Jam Nuts surround Throttle Stop to lock location of full throttle stop.

*Each one of these pieces work together to achieve the smoothest throttling possible. Stops provided work inside of the chassis uprights

DRIVEN

Notes
